

# DS-K7P03 Exit Button



# **Features**


- Dimension (L × W × H): 86 mm × 86 mm × 25.7 mm (3.39" × 3.39" × 1.01").
- Input Voltage: 12 VDC.
- Working Current: 40 mA (standby), 70 mA (working).
- Current Rating: 1 A@30 VDC.
- Output Contact: NO/NC/COM contact.
- Panel: Stainless steel.
- Aging Test: Already passed 1 million times aging test.
- Suitable Doors: All kinds of narrow doorframes.
- Working Temperature: -20 °C to 50 °C (-4 °F to 122 °F).
- Working Humidity: 0 to 95% (relative humidity).
- Detection Range (Adjustable): 40 mm to 120 mm (1.57 to 4.72").
- Time Delay: 1 to 25 s (adjustable)
- LED Indicator Status: Green/red LED indicates working/standby.
- Product Weight: 0.2 kg (0.44 lb).






## **Dimension and Installation**

## **Dimension**

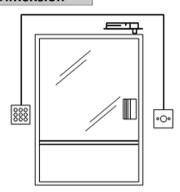

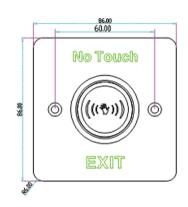




## Installation

Detection range: 4-12cm(Adjustable)

VR1 illustration: ⊗ The Farthest distance

⊕ The Nearest distance

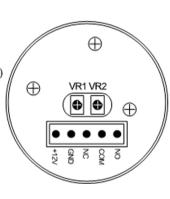

Time delay:1S~25S

VR2 illustration: ⊗ Min.time delay

⊕ Max.time delay

Distributed by

**HIKVISION**°

## Headquarters

No.555 Qianmo Road, Binjiang District, Hangzhou 310051, China T +86-571-8807-5998 overseasbusiness@hikvision.com

### Hikvision USA

T+1-909-895-0400 sales.usa@hikvision.com

#### Hikvision Australia T+61-2-8599-4233 salesau@hikvision.com

Hikvision India T +91-22-28469900 sales@pramahikvision.com

## Hikvision Canada T+1-866-200-6690

sales.canada@hikvision.com

#### Hikvision Thailand T +662-275-9949 sales.thailand@hikvision.com

#### Hikvision Europe T +31-23-5542770 sales.eu@hikvision.com

Hikvision Italy T +39-0438-6902 info.it@hikvision.com

#### Hikvision Brazil T +55 11 3318-0050 Latam.support@hikvision.com

Hikvision Turkey T +90 (216)521 7070- 7074 sales.tr@hikvision.com

#### Hikvision Malaysia T+601-7652-2413 sales.my@hikvision.com

#### Hikvision UK & Ireland T +01628-902140 sales.uk@hikvision.com

Hikvision South Africa Tel: +27 [10] 0351172 sale.africa@hikvision.com

#### Hikvision France T +33(0)1-85-330-450 info.fr@hikvision.com

**Hikvision Kazakhstan** T +7-727-9730667 nikia.panfilov@hikvision.ru

#### Hikvision Vietnam T +84-974270888 sales.vt@hikvision.com

Hikvision UAE T +971-4-4432090 salesme@hikvision.com

#### Hikvision Singapore T +65-6684-4718 sg@hikvision.com

Hikvision Spain T +34-91-737-16-55 info.es@hikvision.com

#### Hikvision Tashkent T +99-87-1238-9438 uzb@hikvision.ru

Hikvision Hong Kong T +852-2151-1761 info.hk@hikvision.com

#### Hikvision Russia T +7-495-669-67-99 saleru@hikvision.com

Hikvision Korea T +82-{0}31-731-8817 sales.korea@hikvision.com

#### Hikvision Poland T +48-22-460-01-50 info.pl@hikvision.com

Hikvision Indonesia T +62-21-2933759 Sales.Indonesia@hikvision.com

#### Hikvision Colombia sales.colombia@hikvision.com