



User Manual

Single Master with Multiple Remotes INTERPHONE SYSTEM TP-12RM



www.commax.com

COMMAX Co.,Ltd.



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.



Table of contents

Fable of contents	. 1
1. Greetings	. 1
2. Warnings and cautions	
3. Installation	
4. Wiring	. 4
5. Power Supply	
6. Operation Instruction	
7. Call Another Station	. 5
3. Wiring Diagrams	. 5
9. Important Safety Instructions	
10. Specifications	



1. Greetings

- Thank you very much for choosing COMMAX.
- Please read this manual carefully before you use the product.



2. Warnings and caution

Please follow the things described below in order to prevent any danger or property damage.



Warning

It may cause a serious damage or injury if



Caution

It may cause a minor damage or injury if violated.



Prohibition.



No disassembly



No touch



Must follow strictly.



Shows plugging out the power cord without an exception



Shows the warning and caution for an electric shock.



Shows the warning and caution for a fire.

Warning

Please don' t use several products at the same time on one power socket.

It may cause a fire due to an abnormal overheating.



Please don't bend the power cable excessively or it may cause an electric shock.

· fire when using a damaged power cable.



Please don't handle the power cable with a wet hand

· It may cause an electric shock.



Please plug out the power cable from the socket when not using it for a long period of time.


· It may shorten the product lifespan or cause a fire.



Please don't install the product in the place where there is much oil, smoke or humidity

Power & Installation

· It may cause an electric shock or fire




Please don't install the product with the lightening and thunder.

· It may cause an electric shock or fire.



Please don't use and connect this product with other products with different rated voltage

It may cause a disorder or



When installing the product that generates heat, please install the product away from the wall (10cm) for the ventilation.

It may cause a fire due to the increased internal temperature.



Cleaning & Use

Warning

Please don't disassemble, repair or rebuild this product arbitrarily (please contact the service center if a repair is needed.

· It may cause an electric



If an abnormal sound, burning smell or smoke is coming out of the product, please plug out the power cable and contact a service center.

· It may cause an electric shock or fire.



Please don't insert any metallic or burnable materials into the ventilation hole.

· It may cause an electric shock or fire.



Please use only the designated batteries for the products of using DC power.


· It may cause an electric shock or fire.





Caution

Please plug the power cable firmly into the inner end



Please hold the plug tightly when unplugging the power cable (a part of the copper wire may be disconnected if the grabbing is only made on the cord when pulling out the

It may cause an electric shock or fire




When connecting the power cables after cutting the cable, please install the product with power off

It may cause an electric shock or fire



When installing the product, please fix it firmly while using the wall-mounting unit and

It may cause an injury from the falling object.



Please be careful when using an AC circuit breaker since there is a possibility of an electric shock.



Please check the use voltage and current for the DC-only products and use the appropriate rectifier.



Please avoid direct rays of the sun or heating devices at a time of installation.

· It may cause a fire.



Please don' t install the product on an unstable place or small support board.

· It may cause an injury if it falls down while in use.







When cleaning the product, please rub it with a soft and dry cloth after plugging out the power cable. (Please don't use any chemical products such as wax, benzene, alcohol or cleanser.)



Please don't drop the product on the ground and don't apply a shock .

· It may cause a failure.



Please use the designated connection cable within the maximum calling distance designated for the product

· It may reduce the product performance





Power & Installation



3. Installation

The junction box supplied may be mounted to a wall or single-gang outlet box. The screw terminal designations are as follows:

1, 2,11, 12

Station Number

1

Call line terminal

Audio around

+ :

24V DC(+) connection

- :

24V DC(-) connection

Lay the system out before beginning installation. Decide on the most efficient cable runs and assign station numbers. Future service or expansion of the system will be facilitated if you draw a diagram of the system. System wiring diagram is shown in Figure 2.



4. Wiring

Use multi-conductor cable. Do not use twisted pair or shielded cable. The number of conductors required equals 3, plus the total number of Stations. Single Master/Remote system wiring consists of 2-conductor cable from each remote to the master. Begin wiring with station number 1. Write the color code of each wire on your diagram. Be sure to connect the proper wire to the L terminal at each station. Be sure to observe correct polarity when connecting the power supply.




5. Power Supply

Use only the model RF-2AS power supply. BE SURE TO OBSERVE CORRECT POLARITY WHEN CONNECTING THE POWER SUPPLY TO THE JUNCTION BOX.

Connect power supply after system wiring is complete.



🔓 6. Operation Instruction

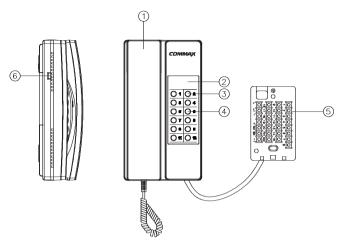

- ① Handset
- (2) Button Plate
- (3) Call Button
- 4 LED Lamp
- (5) Conductor
- (6) Volume Switch



7. Call Another Station

1. Master to Remote

Raise the handset and press the desired call button. A call siginal will be heard at the selected station.

Place the handset on the hook switch to end a call.

2. Remote to Master

Just lift up the handset, a call siginal will be heard from the Master.

When finish talking, place the handset for stand-by.



8. Wiring Diagrams

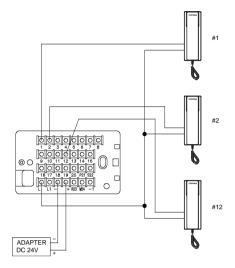


Figure 1. System Wiring Diagram

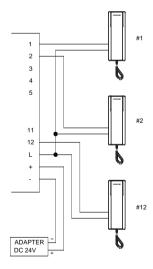


Figure 2. TP-12RM master with TP-S remotes



9. Important Safety Instructions

- Do not connect the power supply until system wiring is complete.
- Except for the power supply AC power cord plug, do not connect wires directly to AC power.
- Do not expose any equipment to rain or moisture
- Do not hammer on or staple through cables.
- Route cables away from excessive heat and high-voltage cables.
- Do not alter component wiring.



10. Specifications

No.of stations: Single master and up to 12 remotes.

Operating Voltage: 24VDC

Power Supply : Model RF-2AS

Supply Current: 30mA minimum(idle), 170mA maximum

Output Impedance : 6 ohms

• Station Operation: Master - Push button station selection:

full duplex handset communication

Remote - lift up handset only.

Call Signal: Master to remote - electric call tone.

Remote to master - Melody sound.

Distance: 1km with Ø0.65 cable

Wiring required : Multi conductor cable.

Mounting: Wall or desk-top. Junction boxes supplied.

Temperature: 0°C~40°C(32°F~104°F)

Dimensions: 116 X 208 X 67mm





COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea Int'l Business Dept. Tel.: +82-31-7393-540~550 Fax.: +82-31-745-2133

Web site: www.commax.com